

T10Pro is a latest portable multifunctional GNSS receiver, a new generation of measurement engine, supporting tilt measurement, NFC, built-in 4G Modem, Bluetooth and WIFI. It adopts a new appearance design, magnesium alloy structure and Linux operating system. It is an extremely light-weight, fully functional and portable geodesic GNSS receiver.



Characteristic

Linux Intelligent System

ARM Cortex-A7 + Linux, the intelligent system platform, brings efficient computing and unlimited expansion of product functions to users.

Multi Constellation

With its 1408 channels, T10Pro provides an excellent on board real time navigation solution with high accuracy. All GNSS signals (GPS, GLONASS, BDS, GALILEO, QZSS, SBAS and IRNSS) are included.

Tilt Measurement

T10Pro has the IMU technology. Fast initialization and up to 60° inclination.

Combined Antenna

The new four in one antenna integrates GNSS, WIFI, Bluetooth and 4G, with smaller volume and better signal.

4G Modem


T10Pro has an internal 4G Modem that operates with more cellular network signals, a fast internet connection is guaranteed.

Long Endurance

Built in high-capacity lithium battery ensures continuous working time of more than 16 hours under normal operation.

IP68 Design

Industrial design, solid magnesium alloy shell, in line with IP68 design requirements, safe and reliable.

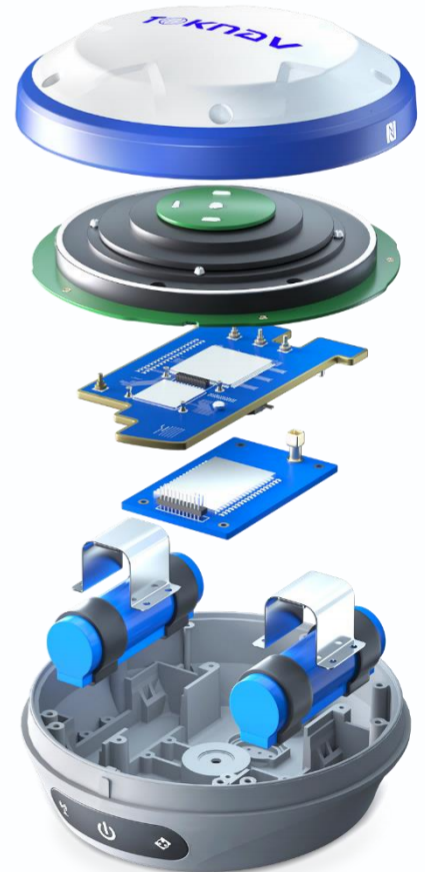


Europe, North & South America
Tel & WhatsApp: +1 (323) 847-7713 (Ian)
Asia, Africa & Oceania
Tel & WhatsApp: +86 139 2607 5986 (Jeffrey)

ITEM		SPECIFICATION	REMARKS
HARDWARE SYSTEM		ARM Cortex-A7 1.8GHz	
OS		Linux	
GNSS	GPS	L1C/A, L1C, L2P(Y), L2C, L5	PPP-B2b, PPP-E6, SBAS supported
	GLONASS	L1, L2, L3	
	BDS	B1I, B2I, B3I, B1C, B2a, B2b	
	GALILEO	E1, E5a, E5b, E6	
	QZSS	L1, L2, L5	
	SBAS	L1	
	NavIC (IRNSS)*	L5*	IRNSS support in future
	Channel	1408	
	Data format	NMEA-0183	
	Correction I / O Protocol	RTCM 2.X, RTCM3.X	
	Data update frequency	5Hz(Typ) 20Hz(max)	
	Recapture Time	<1s	
	Cold Boot	<30s	
POSITIONING ACCURACY	Single (RMS)	Horizontal: 1.5m Vertical: 2.5m	
	DGPS(RMS)	Horizontal: 0.4m Vertical: 0.8m	
	RTK(RMS)	Horizontal: $\pm(8\text{mm}+1\text{ppm})$ Vertical: $\pm(15\text{mm}+1\text{ppm})$	
	Time Accuracy (RMS)	20ns	
	Static Accuracy (RMS)	Horizontal: $\pm(2.5\text{mm}+0.5\text{ppm})$ Vertical: $\pm(5\text{mm}+0.5\text{ppm})$	
	Speed Accuracy (RMS)	0.03m/s	
	Tilt compensation Accuracy(within 60°)	$\leq 2\text{cm}$	
SYSTEM	Bluetooth	BR+EDR+BLE	
	WIFI	802.11 b/g/n	
	Network	LTE FDD: B1/2/3/4/5/7/8/12/13/18/19/20/25/26/28 LTE TDD: B38/39/40/41 WCDMA: B1/2/4/5/6/8/19 GSM: B2/3/5/8	
	Data Radio	Frequency: 410~470MHz Protocol: TRIMTALK, TRIMMK3, SOUTH, TRANSEOT RF transmit power: 0.5W/1.5W Air baud rate: 9600 / 19200bps	
	Storage	32GB Storage	
INDICATOR	Power Indicator	Show power status	
	Satellite Indicator	Show position status	
	Data link Indicator	Show differential signal status	
BATTERY	Battery	3.7V, 9600mAh	
	Work time	More than 16 hours (Typical, Rover, GSM)	The static working mode supports continuous data



Europe, North & South America
Tel & WhatsApp: +1 (323) 847-7713 (Ian)
Asia, Africa & Oceania
Tel & WhatsApp: +86 139 2607 5986 (Jeffrey)

			collection for 24 hours under full power
	Charge	MTK PE+1.1/2.0 9V/2A USB PD 12V/1.25A 5V/3A	Support fast charging adapter and adaptively and dynamically adjust charging current
ENVIRONMENTAL	Work Temperature	-20℃ ~ +60℃	
	Storage Temperature	-40℃ ~ +85℃	
	Shock	Withstand 1.5M pole drop	
	Protection	IP68	
PHYSICAL	Material	Magnesium alloy main body, ABS/PC top cover	
	Dimension	Φ147.9mm*68mm	
	Weight	≤0.74kg	
A FULL SET	T10Pro Device	1 SET	
	USB power adapter	1 PCS	
	USB A To Type-C	1 PCS	
CERTIFICATION	Regulatory Compliance	NGS、CE、IGS、FCC、KC 	

Manufacturers may update parameters at any time, please refer to the latest product information.

- ▶ Equipped with electronic fence system, Toknav's product have area code restrictions. Any issue please contact Toknav or local dealers to verify the specific details.



Europe, North & South America

Tel & WhatsApp: +1 (323) 847-7713 (Ian)

Asia, Africa & Oceania

Tel & WhatsApp: +86 139 2607 5986 (Jeffrey)